


# AIR-CONDITIONER PHASE PROTECTOR

NO.W-E-0011

**QD-P01E**

**AIR-CONDITIONER PHASE PROTECTOR**

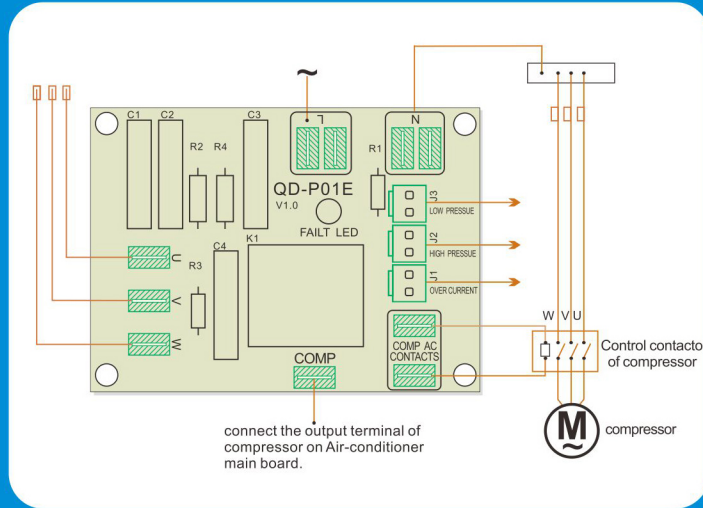

- The live wire of protector and Air-conditioner main board should be same phase line.
- If need connect the overcurrent, high-pressure or low voltage of compressor, please cut the corresponding jumper wire J1, J2, J3.

**QD-P01E**  
**AIR-CONDITIONER PHASE PROTECTOR**



MADE IN CHINA



**AIR-CONDITIONER PHASE PROTECTOR**

## AIR-CONDITIONER PHASE PROTECTOR

**MODEL:**  
**QD-P01E**

- ◆ phase order protection, when the phase sequence of wiring scheme changed cause of the circuit maintenance, release the contactor at once for protecting the compressor.
- ◆ phase loss, when any one of three phases cut-out, release the contactor at once for protecting the compressor.
- ◆ compressor overcurrent protection, high pressure protection, low pressure failure indication.



Please install by certificated technician.  
Please test the system before installation.